

CHICK-DEL-A

HOW DOES IT WORK?

Mix - Controls the volume of the repeats.

Delay 1- Controls the amount of time in between repeats in the first delay chip.

Regen 1 - Controls the number of repeats in the first delay chip. Max this out with a

high enough mix control for some crazy, oscillated sounds.

Delay 2 - Controls the amount of time in between repeats in the second delay chip.

between repeats in the second delay chip Regen 2- Controls the number of repeats in the first delay chip. Max this out with a high enough mix control for some crazy, oscillated sounds

POWER REQUIREMENTS

9V Center Negative - Using anything else will ruin your pedal and void the warranty. Consumes 32mA.

WARRANTY

All Westminster Effects carry a limited lifetime warranty for pedals sold within the United States and a one-year warranty for pedals sold internationally, for workmanship and components. Thewarranty does not cover misuse or damage due to accidents. Tampering with components such as trimpots voids the warranty.

westminstereffects.com

facebook.com/westminstereffects instagram.com/westminstereffects