

# QUICKSTART

## REMOTE 4

The Remote 4 gives you access to extended pedal functionality and presets. It works with all of our pedals that have a CTRL jack.

Refer to the your pedal's Owner's Manual for supported functionality.



To connect your Remote 4:

1. Connect a TRS cable to the Remote 4.
2. Press and hold the pedal's right footswitch while plugging the cable into the **CTRL** jack.
3. Press one of the **Remote 4** footswitches to select a mode (see pedal Owner's Manual).
4. Press the pedal's right footswitch and hold for 3 seconds to save the configuration. The right LED will blink green.

The configuration is saved when power is turned off or the remote is unplugged.

Scribble strips above each switch can be labeled with a Sharpie and erased using isopropyl alcohol.