

Quick Start Guide

for RockBoard® QuickMount®

Thank you for purchasing a **RockBoard® QuickMount® Pedal Mounting Plate**.

The **RockBoard® QuickMount® System** was designed to do away with sticky hook and loop tape that attracts dust and dirt and is a hassle to remove from your pedals. It fits perfectly in the **RockBoard®** slot grid on our pedalboards and allows for instant secure mounting of your pedals.



Should your pedal's own screws not be long enough, we have included common screw types that are long enough to sufficiently fit the QuickMount® plates.



To detach the QuickMount®, we recommend the **RockBoard® QuickMount® Quick-Release tool** (sold separately). On the underside of the pedalboard, simply place the QuickRelease® Tool over the clamps and press down. This helpful little tool will push the clamps together on both sides at the same time so you can quickly and easily remove the pedal from your board.

Attaching the QuickMount® Pedal Mounting Plates

The QuickMount® plates are designed to screw onto the back of your pedals, using the original (or supplied replacement) screws, and be easily removable without leaving any residue.

Most **RockBoard® QuickMount® Pedal Mounting Plates** will fit a variety of different pedals. Don't fret if your pedal has different screw holes for the bottom plate. All **RockBoard® QuickMount® Pedal Mounting Plates** with a flat surface include a reusable adhesive silicone pad that sticks to any smooth surface without leaving any residue.

Rubber mat:

To mount your QuickMount® properly into your **RockBoard®** grid, first choose either the 3 mm or 4 mm thick rubber mat provided. Then, peel the protective film off the rubber mat and attach it to back of QuickMount® baseplate. If you prefer to be able to slide the pedal on **RockBoard®** grid, use 3 mm rubber mat, or if you prefer to mount your pedal tight, use 4 mm mat. Both solutions will secure your effects pedal, however slight slide can help you with creating your **RockBoard®** pedalboard.



Adhesive Silicone Pad

If you have a pedal without any screws or they do not fit the QuickMount® Plate, you can use the included silicone mat.

Simply wipe off the bottom of your effects pedal with a clean, soft, and dry cloth and clean off any glue residue from previously, installed hook and loop tape. When the bottom surface of your pedal is clean and dust free, peel off the protective film off the silicone mat and place it on the bottom plate.

IMPORTANT NOTE: The silicone mat is reusable and will not damage any smooth surfaced stickers or labels. To avoid damaging paper stickers, cut out a piece of the protective film and cover the sticker with it before applying the silicone pad.



Don't worry if the silicone pad gets dirty. Peel it off, straighten it out and clean with warm water. Air dry only, do not use a cloth as this will leave dirt and fibers on the surface. Once dry, you can reattach it to the pedal and QuickMount® plate.



Screws:

Most versions of the QuickMount® attach to your pedal using screws from the pedal's bottom plate. Simply turn your pedal over, loosen the screws using a suitable screwdriver or wrench and take them out of the holes.

Then take the QuickMount® Plate, place it over your pedal's bottom plate and re-insert the screws through the QuickMount®'s screw holes into those of the pedal. Tighten the screws so the QuickMount® Plate is firmly attached.

Mounting on & Removing from RockBoard® Pedalboards

To mount the QuickMount® loaded pedal onto your **RockBoard®** pedalboard, simply place it into position on your pedalboard, and press it down. The holding clamps will grab into the Slot Grid and lock your pedal down. When pedal is mounted properly, you will hear characteristic "click" sound. Make sure that all three latches each holding clamp are grabbing **RockBoard®** grid properly.

WARWICK®, ROCKBOARD®, PEDALSAFE®, and QUICKMOUNT® are the trademarks of Warwick GmbH & Co. Music Equipment KG, which may be registered in one or several categories of goods with the United States Patent & Trademark Office. Some of the aforementioned trademarks may be registered in one or several categories of goods in certain other territories. This is not a comprehensive list of all trademarks of Warwick and specifically does not include any common law trademarks or service marks of Warwick. All other names and marks not mentioned herein are the trade names, trademarks or service marks of their respective owners.

USA DISTRIBUTION: Framus & Warwick Music USA, Inc. | info@rockboard.net | 629.202.6790
CHINESE DISTRIBUTION: Warwick Music Equipment Trading (Shanghai) Co. Ltd. | info@warwick.cn | +862134060110
NORTH EUROPEAN DISTRIBUTION: www.rockboard.de | info@rockboard.de | www.w-distribution.de | www.facebook.com/warwickmusicdistribution
Headquarters: Warwick GmbH & Co. Music Equipment KG | 08258 Markneukirchen / Germany | +49 (0) 37422 / 555 - 0
Family Owned • Solar Powered • Sustainably Manufactured in a Green Environment