

HOW DOES IT WORK?

Decay - Controls how long the reverb lasts.

Tone - A typical tone control. Straight up is flat. To the left darkens your tone, and to the right brightens it.

Level - Dial in how much reverb in proportion to your clean tone.

Regen - Feeds higher frequencies back through the circuit for increased ambience.

Voice - Changes the amount of available reverb. Down is best for spring style sounds, while up is great for more ambient sounds.

POWER REQUIREMENTS

9V Center Negative - Using anything else will ruin your pedal and void the warranty. Consumes 100mA.

WARRANTY

All Westminster Effects carry a limited lifetime warranty for pedals sold within the United States and a one-year warranty for pedals sold internationally, for workmanship and components. The warranty does not cover misuse or damage due to accidents. Tampering with components such as trim pots voids the warranty.