

WESTMINSTER EFFECTS

CHRYSOSTOM CHORUS/VIBRATO

HOW DOES IT WORK?

Speed - Controls the rate of modulation.

Chorus/Vibrato - Switches between chorus or vibrato modes.

Voice - Switches between two voices or intensities. Up is a more pronounced effect.

Depth - Controls how far the signal is modulated or detuned.

POWER REQUIREMENTS

9V Center Negative - Using anything else will ruin your pedal and void the warranty. Consumes 74mA.

WARRANTY

All Westminster Effects carry a limited lifetime warranty for pedals sold within the United States and a one-year warranty for pedals sold internationally, for workmanship and components. The warranty does not cover misuse or damage due to accidents. Tampering with components such as trimpots voids the warranty.

westminstereffects.com

facebook.com/westminstereffects

instagram.com/westminstereffects