



SWEET TEA V3

JHS PEDALS

Everything possible, medium to high gain. Our very own Angry Charlie V3 and our Moonshine V2 make this a high gain monster that goes down easy on a summer night.

Controls

LEFT SIDE - ANGRY CHARLIE V3

VOLUME - Controls the output volume.

DRIVE - Controls the amount of drive or gain just like a tube amp being cranked at high volumes.

BASS - Controls the amount of bass. 50% is relatively flat while turning it to the left decreases bass and to the right increases bass

MIDS - Controls the amount of mids. 50% is relatively flat while turning it to the left decreases mids and to the right increases mids.

TREBLE - Controls the amount of treble. 50% is relatively flat while turning it to the left decreases treble and to the right increases treble.

POWER - Uses 9V DC Negative Center. Do not use more than 9V DC. Your warranty will be voided. 51mA consumption.

RIGHT SIDE - MOONSHINE V2

VOLUME - Controls the output volume.

DRIVE - Controls the amount of drive or gain just like a tube amp being cranked at high volumes.

TONE - Controls the amount of brightness. Right is brighter, left is darker.

BLEND - Adds in clean signal as you turn from left to right. All the way left is full overdrive, all the way right is full clean.

PROOF TOGGLE - Down is a lower volume yet more saturated tone. Up is louder and more open and crunchy.

Jacks

INPUT - 1/4" jack on the top right side of the pedal.

OUTPUT - 1/4" jack on the top left side of the pedal.