

CONTROLS

MIX - Controls the volume of the repeats. Left is less, right is more.

TIME - Controls the length of the delay from 80ms to 800ms. Left is shorter, right is longer.

REPEATS - Controls the amount of feedback or repeats of the delay signal. Left is less, right is more.

TYPE TOGGLE - Gives you two different types of delay. Down is an analog voiced delay that also has true analog runaway sounds when the Repeats are turned up. Up is a digital voiced delay for crisp and clean repeats.

JACKS

INPUT - 1/4" jack on the right side of the pedal.

OUTPUT - 1/4" jack on the left side of the pedal.

POWER - Requires 9V DC negative center power and consumes 71mA. Do not use more than 9V DC. You will void your warranty.