

## TAPE MACHINE

T-M-04 delay

Owner's Manual

All of the TONE CITY products were Poured into our enthusiasm and focus. We never stop on the path of development.

## CONTROLS

SWITCH

**LEVEL -** Controls the ratio of dry and delay signal. Clockwise is increasing the intensity of delay signal.

**TIME -** Setting the delay time.From 20ms to 600ms.

**REPEAT -** Control the repetition of the delay signal. From 1 time to unlimited time

JACKS

**INPUT -** 1/4" jack on the input side. **OUPUT -** 1/4" jack on the output side.

FOOT SWITCH - turn on/off the pedal.

POWER

This pedal should be operate at 9V DC Negative Center . If the use of other specifications of the power supply cause damage. Your warranty will be voided.