

## **CHEESE BALL**



The Cheese Ball is our homage to one of the greatest fuzz/distortion pedals ever created. Rediscover the finest aged cheese in the guitar pedal world.

## controls

**VOLUME -** Controls the overall volume of the unit. Right is more, left is less.

**GAIN -** Controls the amount of distortion/fuzz. Right is more, left is less.

**TONE -** Controls the overall tone of your signal. Right is bright, left is dark. The Tone knob is disengaged when in the "Off" mode. **MODE SELECTOR -** Selects between 4 tone modes. "Off" is the brightest and lowest gain mode and removes the Tone knob. "1" adds in the ability to use the Tone knob and is a mid-scoop sound. "2" adds more mid-range and adds a little more gain. "3" adds much more gain and will give you a gated fuzz sound when the Gain knob is turned up.

jacks

**INPUT -** 1/4" jack on the right side of the pedal

**OUTPUT -** 1/4" jack on the left side of the pedal.

**POWER** - Uses 9V DC Negative Center. Do not use more than 9V DC. Your warranty will be voided. 6mA consumption.