


P-Style Pickup

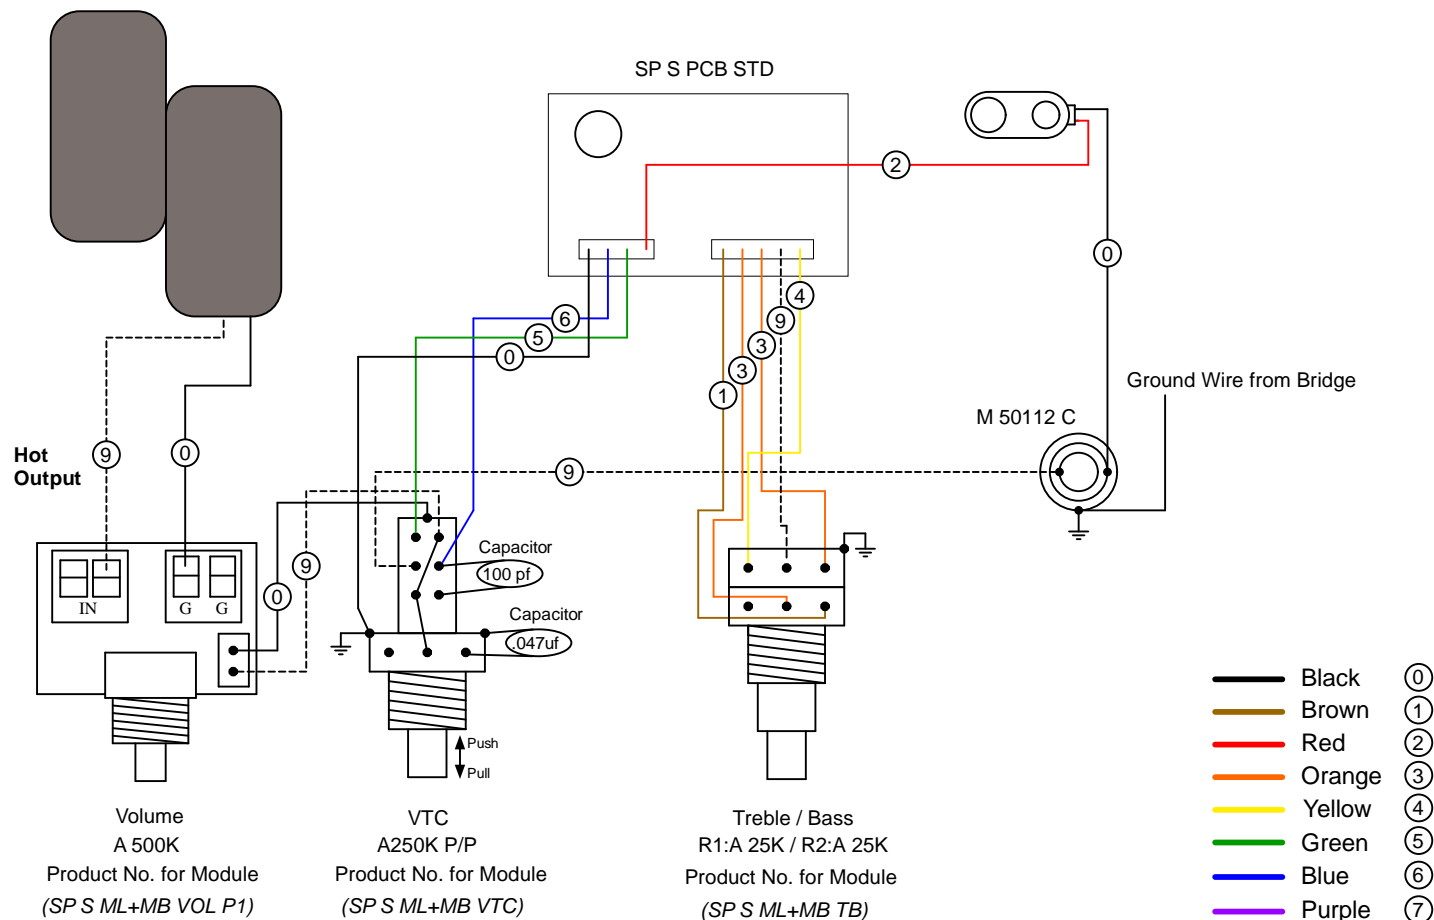

- | | |
|-------------|---|
| Black | ① |
| Brown | ② |
| Red | ③ |
| Orange | ④ |
| Yellow | ⑤ |
| Green | ⑥ |
| Blue | ⑦ |
| Purple | ⑧ |
| Grey | ⑨ |
| White | ⑩ |
| Shrink Tube | |
| Ground | |

Sadowsky Onboard Electronics with Vintage Tone Control

Compatibility:

This wiring schematic applies to the following Sadowsky MetroLine and MasterBuilt bass models:

-20-Fret Ultra Vintage P Bass

The controls are: Volume, VTC, Treble and Bass (stacked). Push/Pull on VTC knob for preamp bypass.

VTC stands for Vintage Tone Control (pull up on the knob for total bypass).

Installation requires a side jack and a battery compartment. If not already done, we recommend shielding the control cavity and pickup cavities at the time of installation. We highly recommend installation by a professional guitar technician or luthier if routing and drilling is required for a battery compartment and/or side jack.

This system is not compatible with EMG or any other active pickups requiring anything other than a 250K or 500K volume pot. For these applications, please custom order a parts-only preamp kit and use your original volume pot.

NOTE: For more information visit our website or contact us on info@sadowskybass.de