



INSTALLATION INSTRUCTIONS

FOR TREMOLO BRIDGES 7410
(REARWARD SADDLE INTONATING ONLY)


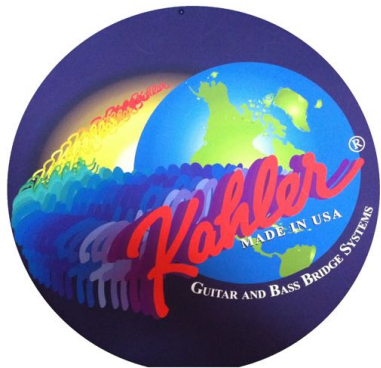


X: LOCATION OF (2) FRONT MOUNTING HOLES (USE CENTERLINE OF FRETBOARD).
SCALE LENGTH MEASUREMENT FOR CORRECT INTONATION IS FROM
CRITICAL CONTACT POINT (CCP) AT NUT AND TO THE CENTER OF
SADDLE TRAVEL (CST).

Y: LOCATION OF (2) REAR MOUNTING HOLES (USE CENTERLINE OF FRETBOARD)
ALIGNMENT LEFT & RIGHT FOR CORRECT STRING LOCATION ON
FRETBOARD. (NOTE: L-R SADDLE ADJUSTMENTS ON BRIDGE).

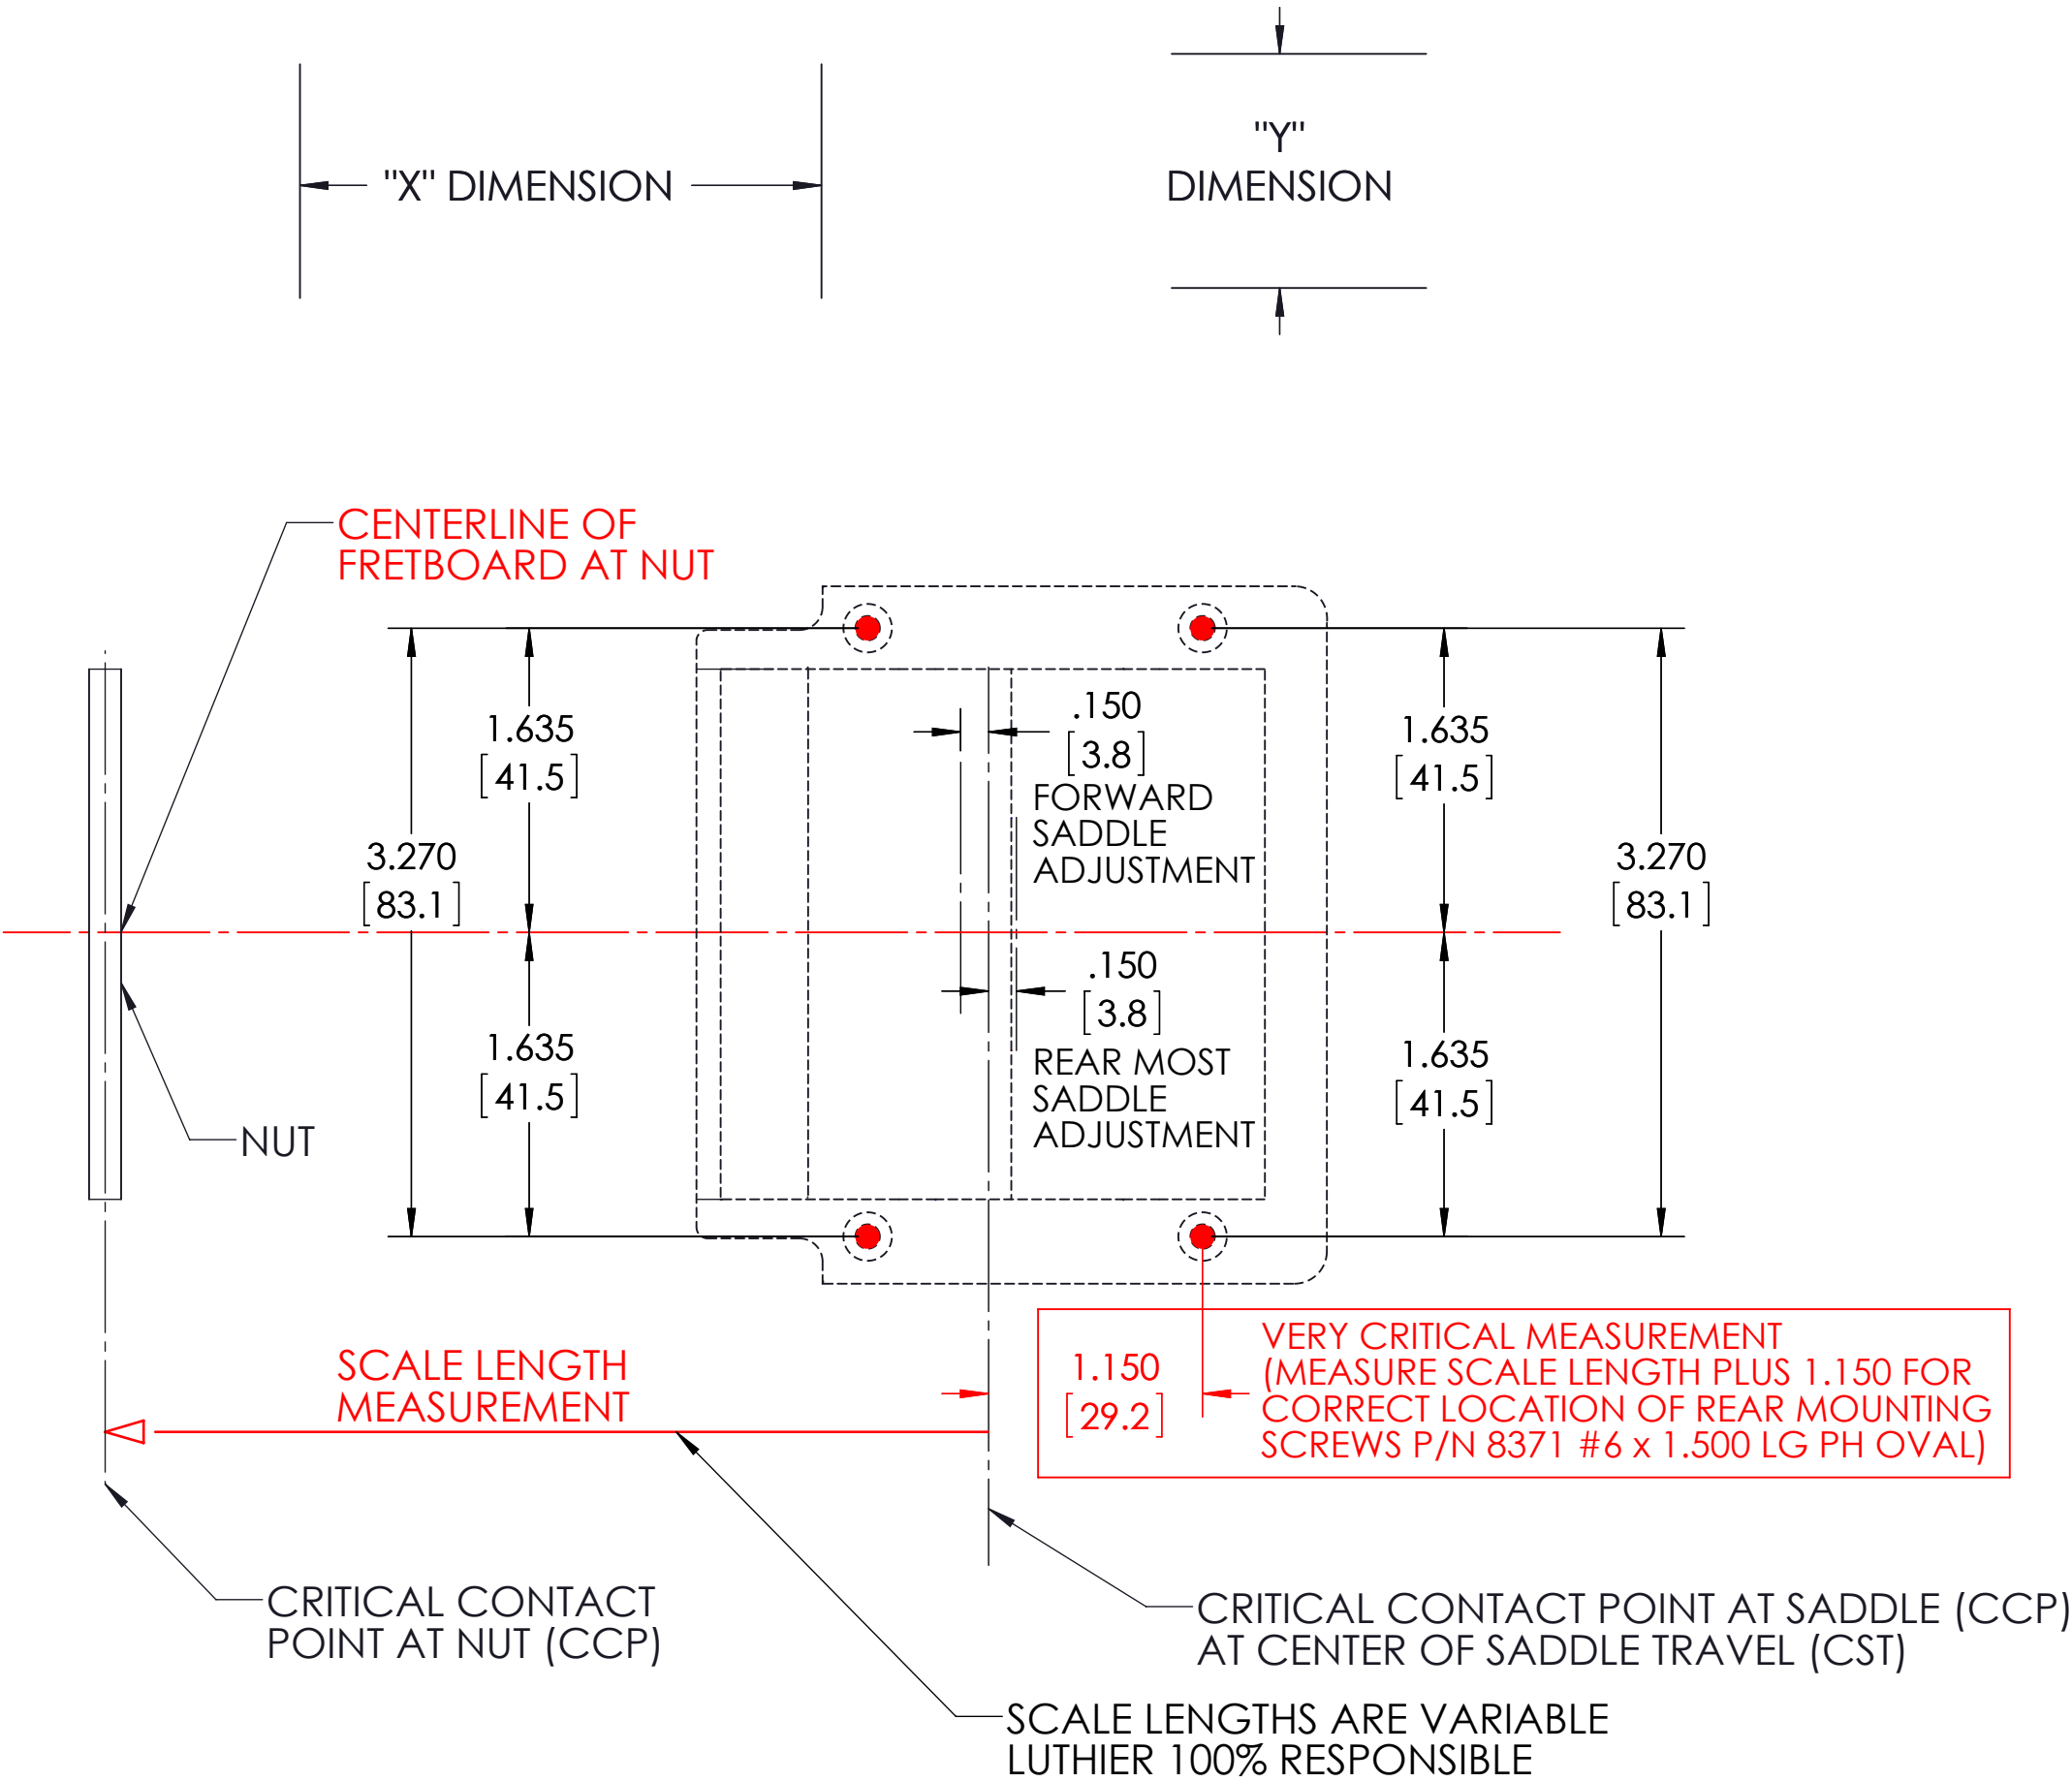

DWG is to offer assistance to a qualified Luthier. We do not guarantee 100% satisfaction on this DWG, therefore the Luthier is 100% responsible for the measurements and routings. "A GUIDE ONLY"	KAHLER INTERNATIONAL INC.		
	LOCATION MEASUREMENTS ASSY: 2410R-W4, 2410R-N5		
	DWG. NO. 6224RIMA		
	DRAWN: TASC	DATE: 03/21/11	SCALE: 1:1

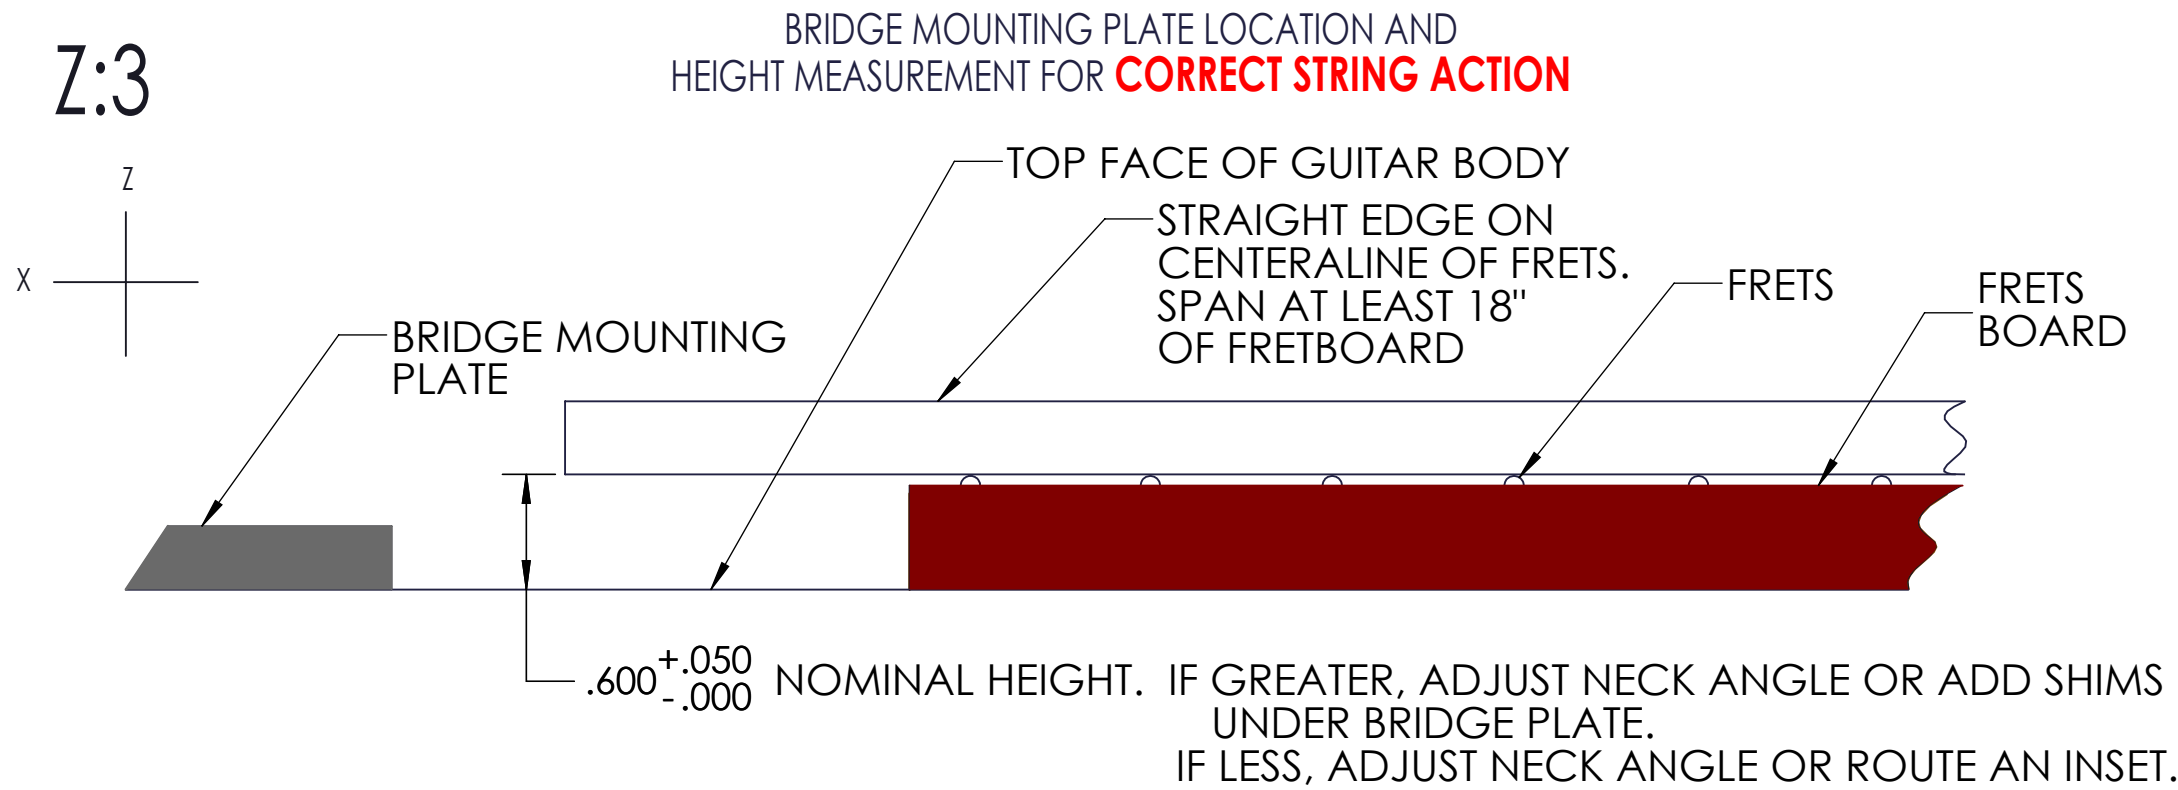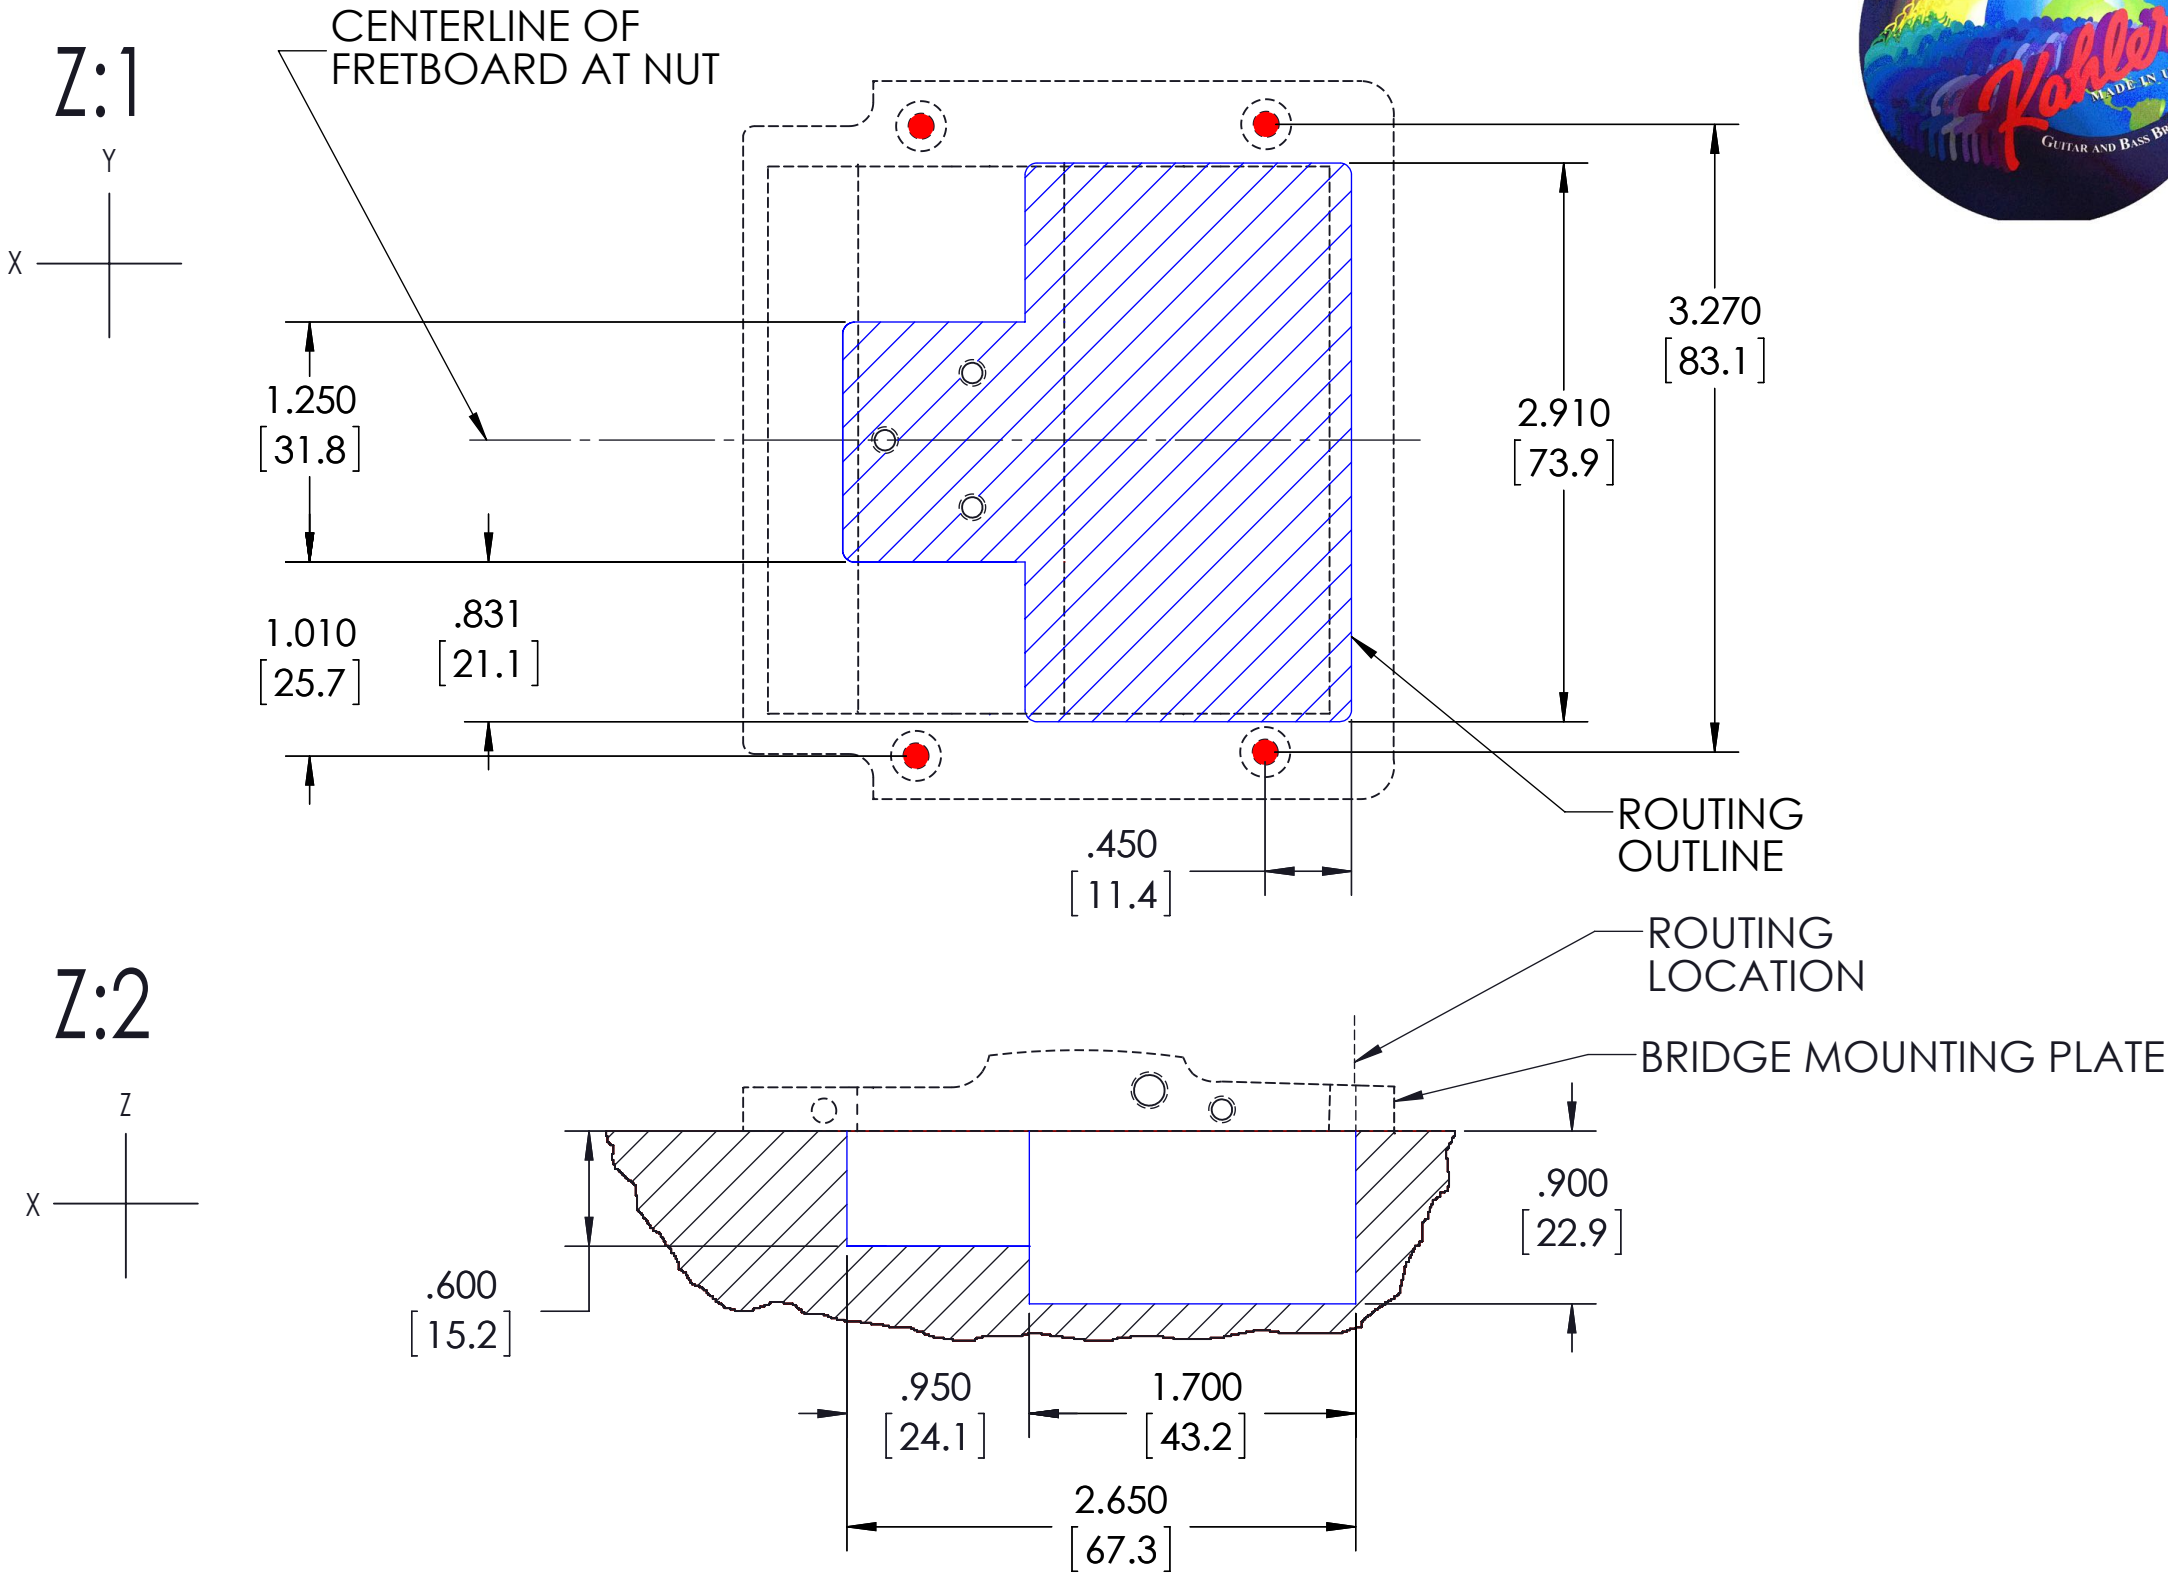

DWG is to offer assistance to a qualified Luthier. We do not guarantee 100% satisfaction on this DWG, therefore the Luthier is 100% responsible for the measurements and routings. "A GUIDE ONLY"			
KAHLER INTERNATIONAL INC.			
TITLE: ROUTING/FRET HT. MEASUREMENTS ASSY: 2410-15, 4410-15, 7410-15			
DWG. NO. 6224RIMA			
DRAWN: TASC	DATE: 03/21/11	SCALE: 1:1	